


Controller Board

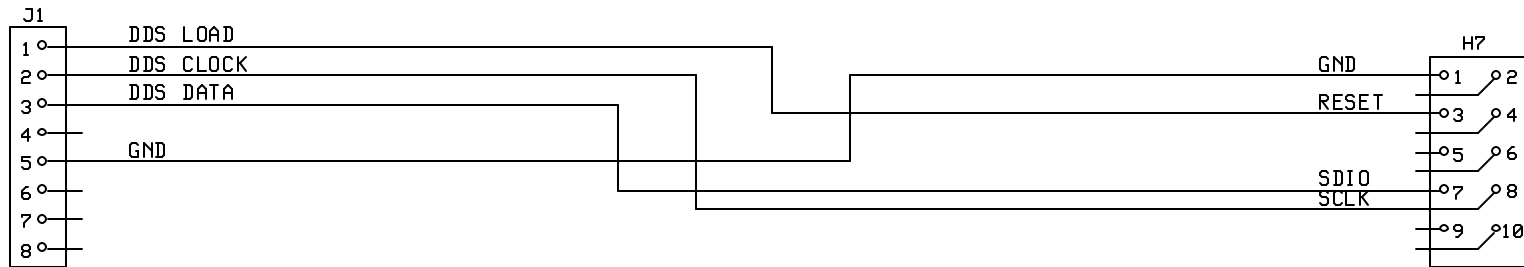

WB6DHW Board

1. Remove 10K resistor R21
2. Install 10K resistor R22
3. Cut the three traces going to H7 pins 3,7 & 8 from PIC
4. Remove shunt on header H2

WB6DHW 9912 board interface

WA6UFQ

Designer's name

Rev 1.0

10/24/2008

Page # or name